




L I G H T I N G

**ASSEMBLY AND INSTALLATION  
INSTRUCTIONS**


**ITEM NO.: CD10171/8/PN**

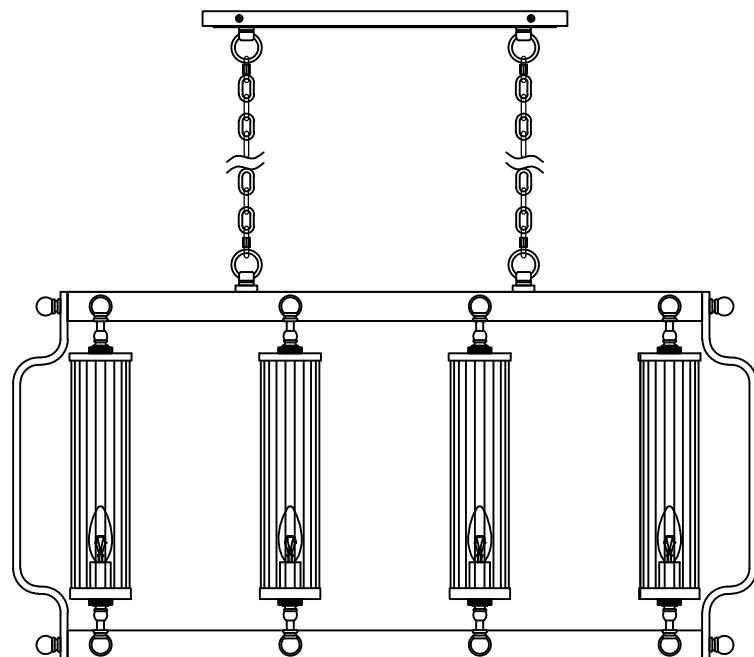

**NOTE:** Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.


**STEP 1:**

Screw the bulb. This Fixture has been rated for up to 40 Watt Max Type B Candelabra Bulbs (NOT Included). Then make the Checking Ring (E) and Dome (D) fall into the bottom, put the glass tube (B), tighten the glass tube (B) use the Checking Ring (E) and Dome (D). Repetitive above operation install other glass tube.

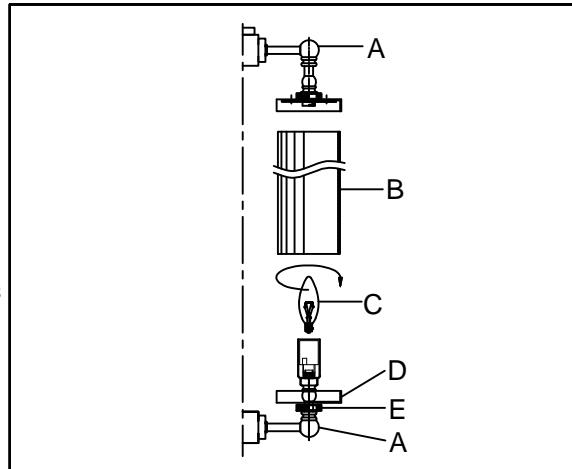


**STEP 2:**

According to the hole in the Mounting Bar (I) fixed the plastic anchors (H). Attach the Mounting Bar (I) to the ceiling by screw (K) and Tapping Screws (J).

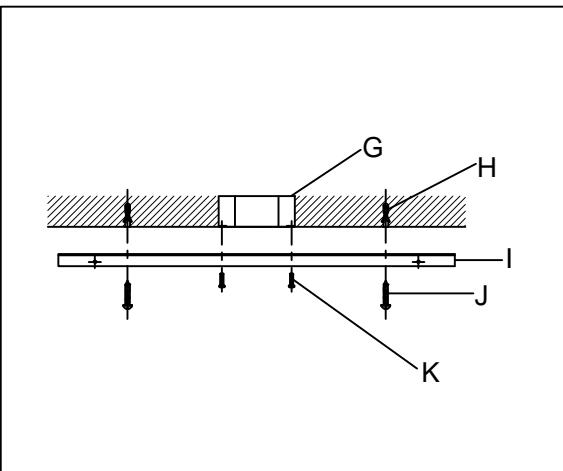

**STEP 3:**


Connect the fixture loop (M) to the canopy chain using the chain link (L). Repeat the action assemble other chain.

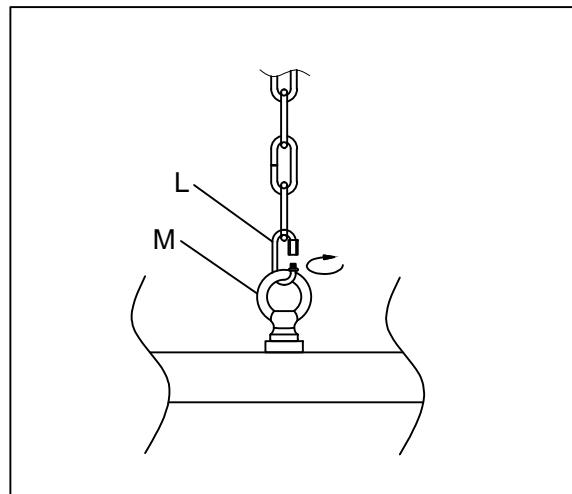

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture disconnect the power by turning off the circuit breaker or removing the fuse from the fuse bo

**STEP 4:**

Connect the fixture to the canopy chain loop (N) using the chain link (O).


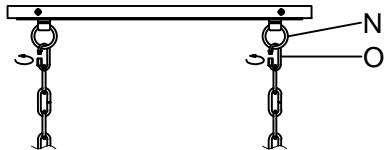


Wrap the Ground Wire from the Fixture around the Ground Screw on the Mounting Bar (P) and then connect the Ribbed Fixture to the White Wire (neutral wire) from the Outlet Box. Connect the Smooth from the Fixture to the Black Wire (live wire) from the Outlet Box. Cover the connections using the Wire Connectors (Q).

NOTE: Black Wire inside Outlet Box may be red or smooth. White Wire inside Outlet Box may be ribbed.

**STEP 7:**

Pass the screw (R) through the canopy (O) lock into the Mounting Bar (P).

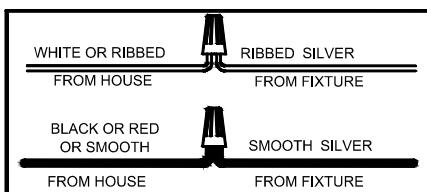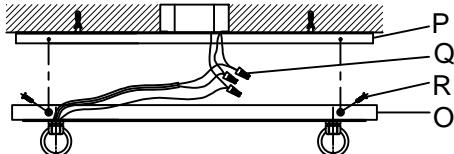

**STEP 10:**

Connect breaker and turn on Light.

**Cleaning & Care:**

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.