




L I G H T I N G

ASSEMBLY AND INSTALLATION INSTRUCTIONS


ITEM NO.: CD10275/12/AGB
CD10276/12/PN

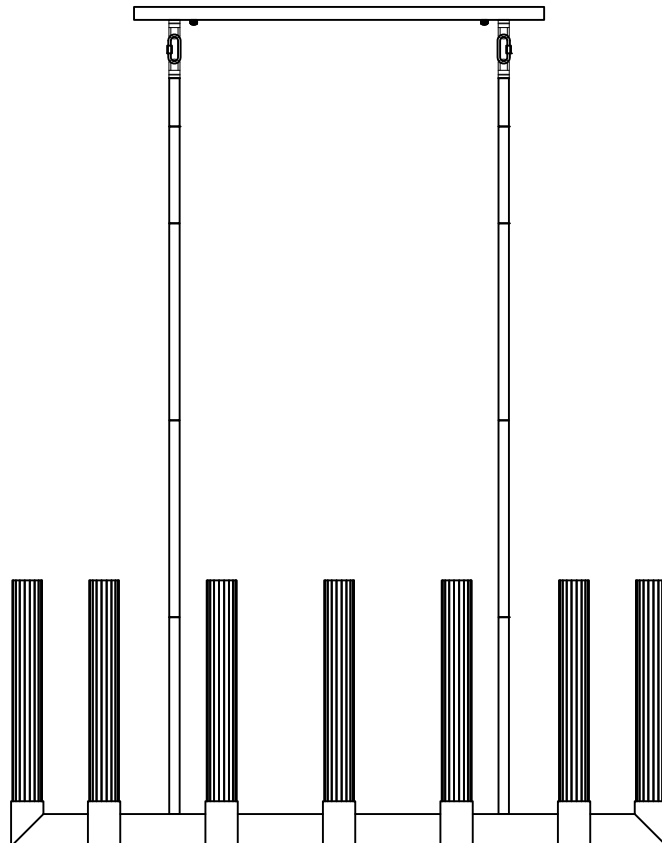

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.


STEP 1:

Attach the Rod(B) assembly to fixture(A).
In turn attach other Rod(C) and Rod(D).

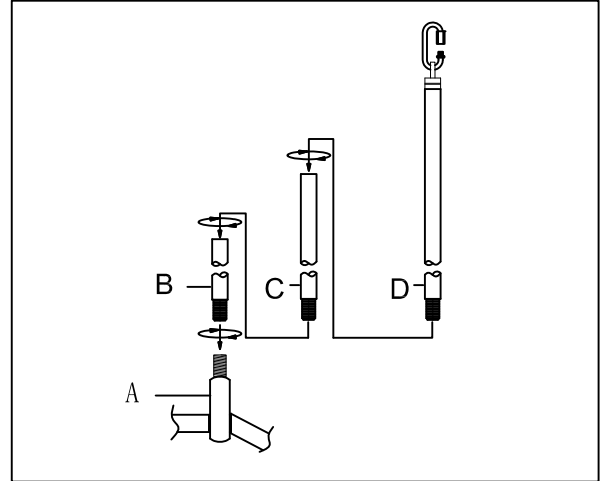


STEP 2:

Plastic anchor(F) on the roof according to the hole on the hanging plate (G).
And using screws(I) and self tapping screws(H) (each 2PCS) to fix the hanging plate(G) on the roof.

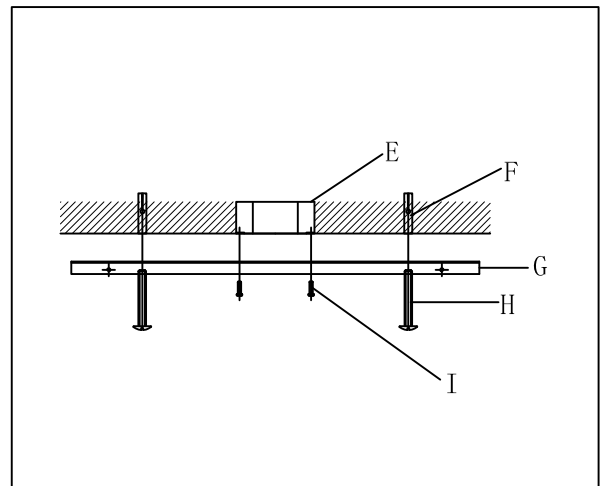

STEP 3:

Use the quick link(K) on the top of stem to hang on the ring(J) of canopy .
and tighten the nuts on the quick link(K).


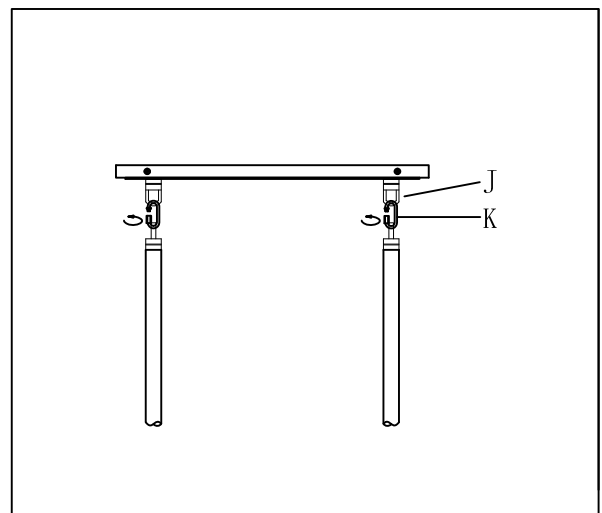


NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

STEP 4:

Wrap the Ground Wire from the Fixture around the Ground Screw on the Mounting Bar and then connect the Ribbed Silver Wire from the Fixture to the White Wire(neutral wire) from the Outlet Box. Connect the Smooth Silver Wire from the Fixture to the Black Wire(live wire) from the Outlet Box. Cover the connections using the Wire Connectors.


NOTE: Black Wire inside Outlet Box may be red or smooth. White Wire inside Outlet Box may be ribbed.

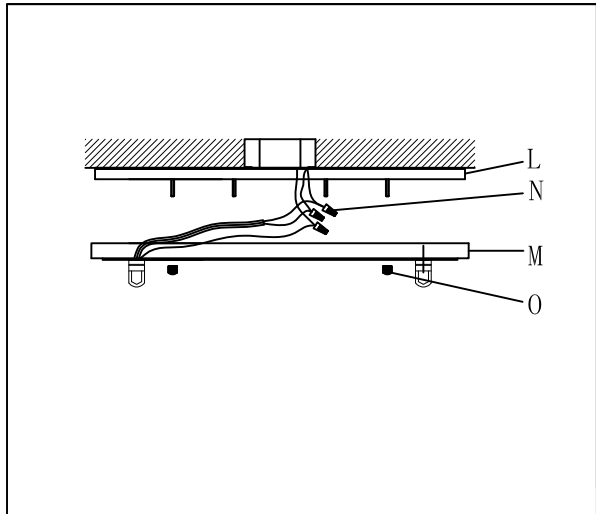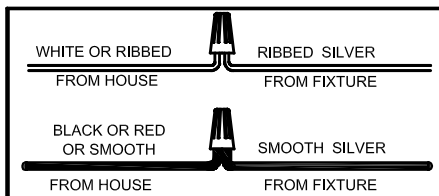

Securing the canopy(M) onto the mounting plate (L) with Ball nuts(O)

STEP 5:

Swirl the bulbs(Q) into the socket(not included) and put the glass shade(P) into the fixture body(R).

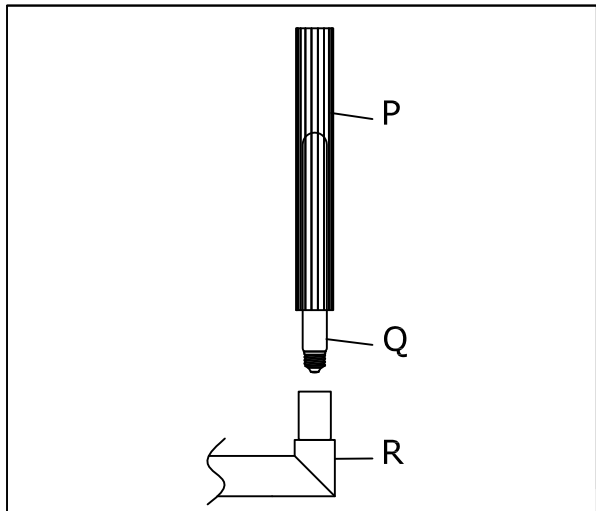

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.