


ASSEMBLY AND INSTALLATION INSTRUCTIONS


ITEM NO.: FM60043/LED/CH

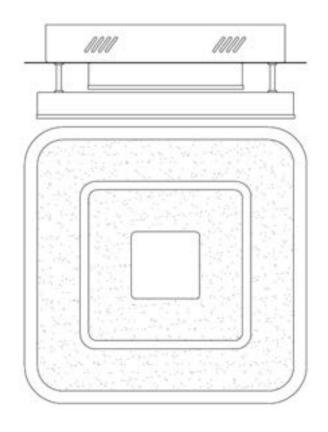


Note: Before Starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box .



Step 1: Enter a hole on the ceiling , Insert the gray anchor(A) , use the English screw(B) to fix the bracket(C) , and use the $self-tapping\ screws(D)$ to firm it .

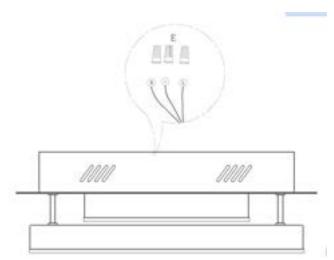

Step 2: Use the red wiring cap(E) to connect the power cord

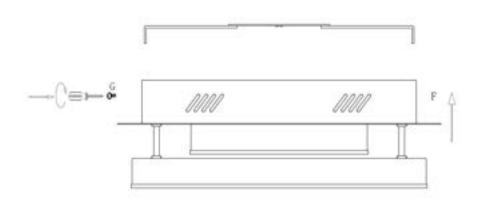

Step 3:Use the screw (G) to fix the fixture(F) on the canopy(C)