


ZEEV

L I G H T I N G

ASSEMBLY AND INSTALLATION INSTRUCTIONS


ITEM NO.: CD10165/12/AGB+MBK

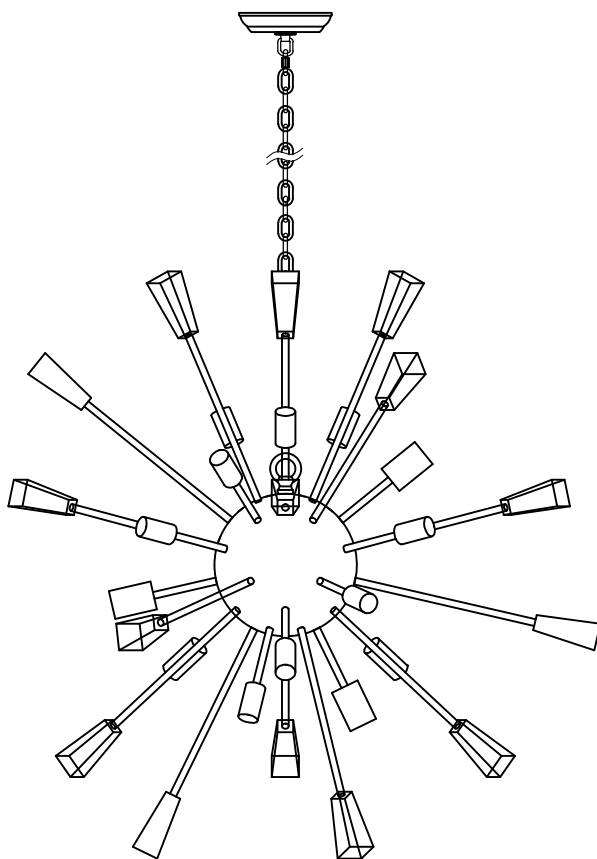

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.


STEP 1:

Attach the Decorative Rod(B) into the Lamp Body(A).

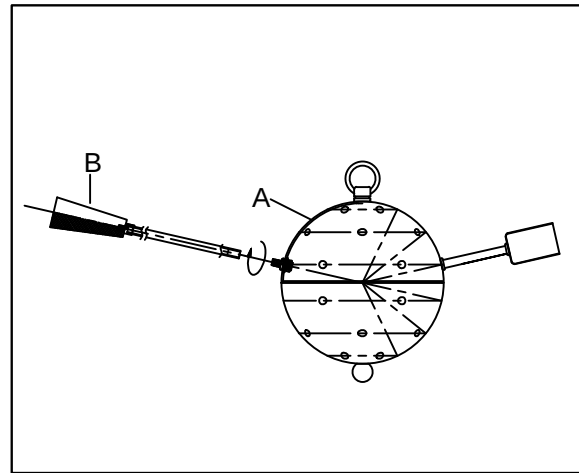


STEP 2:

Attach the Nipple(E) to the Mounting Bar(D) by screwing in the Nipple and locking it on the opposite side with the Nut(C).

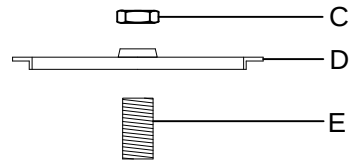

STEP 3:


Secure the Mounting Bar(D) to the Outlet Box(F) with the Mounting Screws(H).

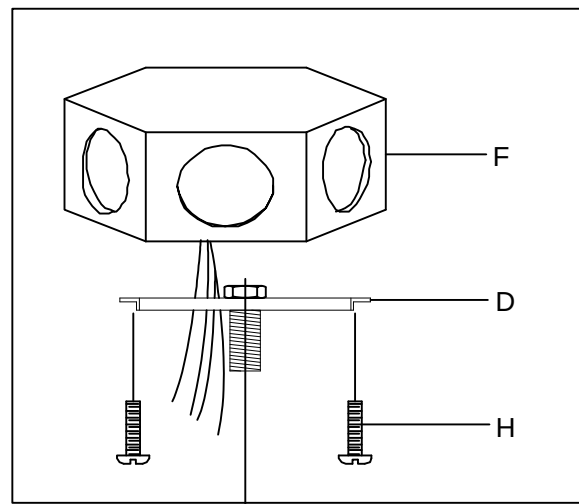

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.


STEP 4:

Attach the Canopy(L) by locking it into the Mounting Bar(D) on the Nipple with the Canopy Loop(K) and Collar(M).

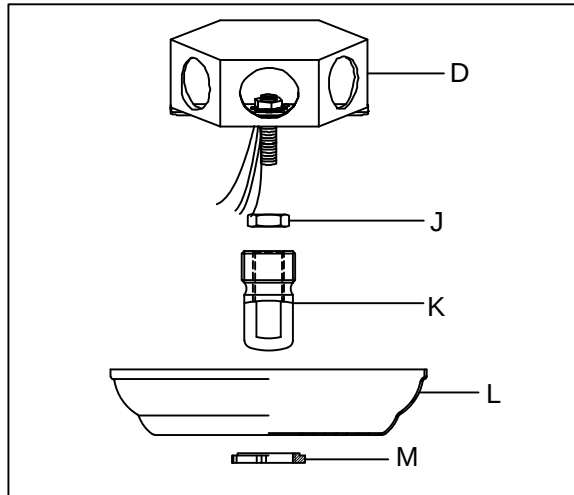


STEP 5:

Connect the fixture loop(Q) to the canopy chain loop(K) using the Chain Link(P).

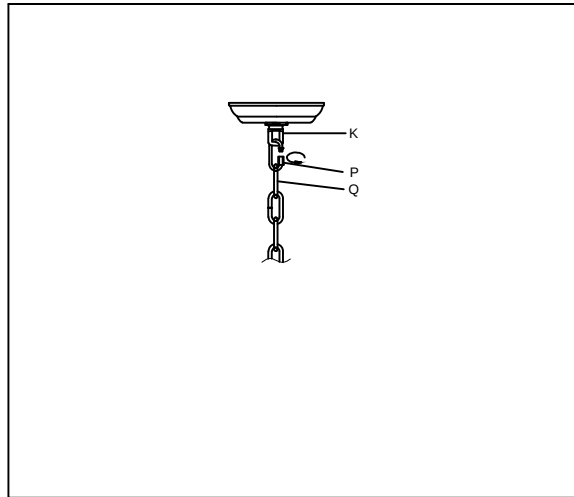

STEP 6:

Connect the fixture loop(N) to the body chain loop(Q) using the Chain Link(O).


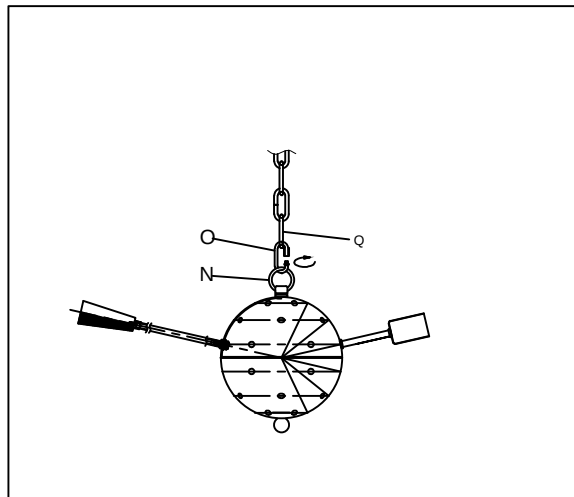


NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

STEP 7:

Wrap the Ground Wire from the Fixture around the Ground Screw on the Mounting Bar (D) and then connect the Ribbed Silver Wire from the Fixture to the White Wire (neutral wire) from the Outlet Box. Connect the Smooth Silver Wire from the Fixture to the Black Wire (live wire) from the Outlet Box. Cover the connections using the Wire Connectors (O).

NOTE: Black Wire inside Outlet Box may be red or smooth. White Wire inside Outlet Box may be ribbed.

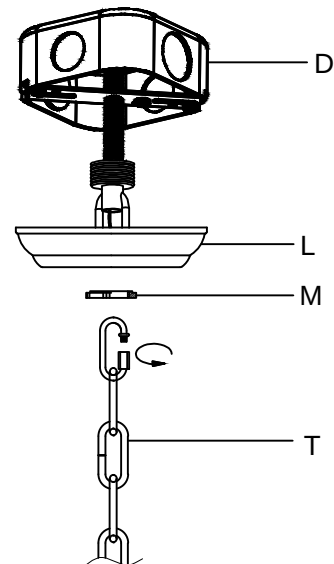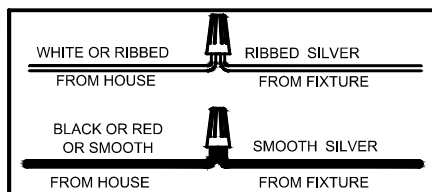

STEP 8:


Slide Canopy (L) back up the Chain link (O) and screw the Collar (M) back into place.

STEP 9:

Screw in the bulbs. This fixture has been rated for up to Max 40 Watt Type B Candelabra Bulbs (Not Included).

STEP 10:


Connect breaker and turn on Light.

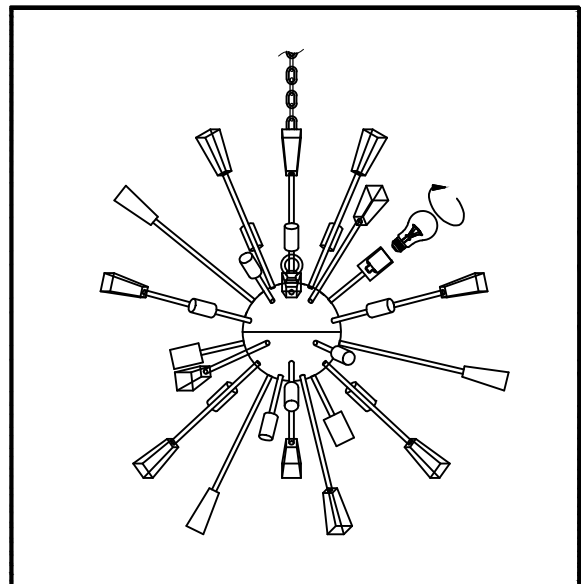

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.

SAFETY CABLE ASSEMBLY

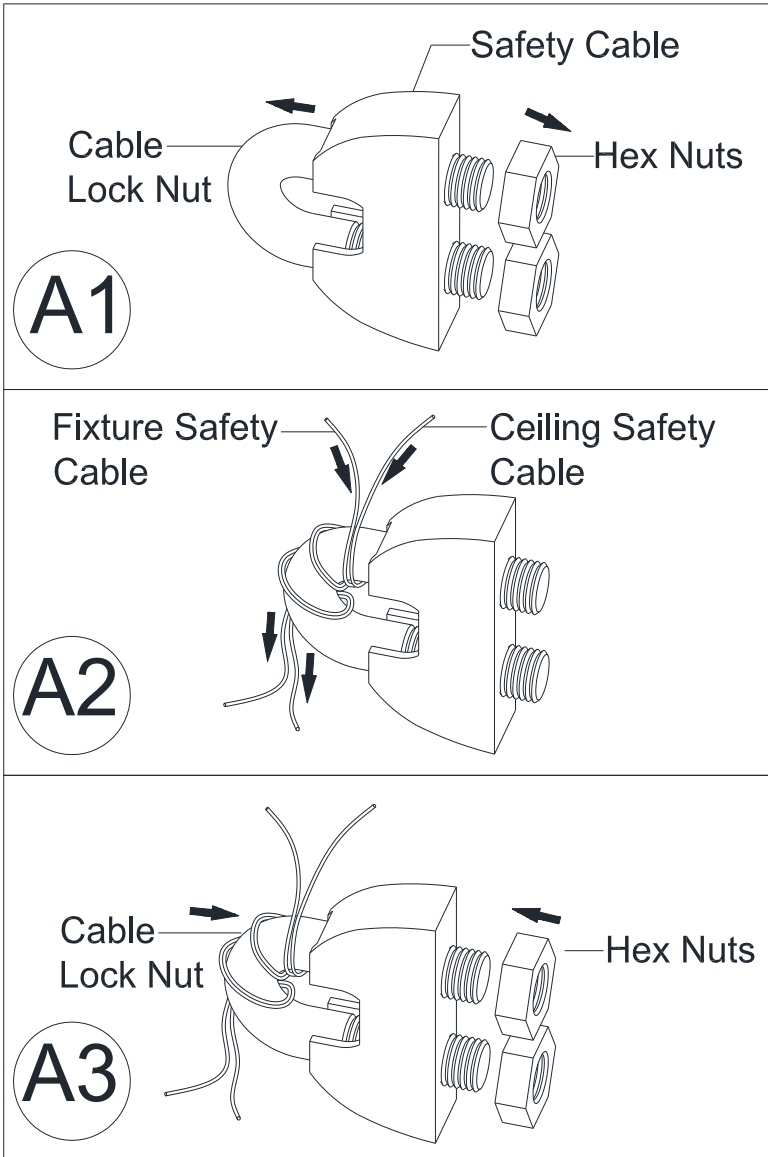

1. Remove Hex Nut from Cable Lock Nut and pull Cable Lock Nut from Safety Cable.

2. Join Fixture Safety Cable with safety cable from ceiling and wrap both safety cables around the Cable Lock Nut.

3. Secure by tightening both Hex Nuts until tight.