


ASSEMBLY AND INSTALLATION INSTRUCTIONS


ITEM NO.: CD10169/12/AGB+MBK

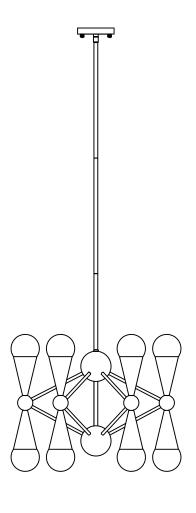

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.


STEP 1:

Attach the Rod(B) assembly to fixture(A).In turn attach other Rod(C)and Rod(D).

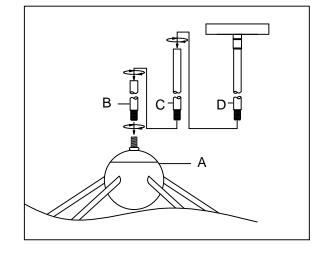


STEP 2:

Attach the Screws(E) to the Mounting Bar(F) by screwing in the Nipple and locking it on the opposite side with the Nut(G).

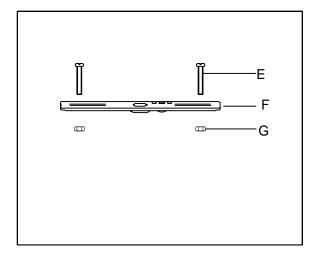

STEP 3:

Secure the Mounting Bar(F) to the Outlet Box(H) with the Mounting Screws(I). Tighten until snug.

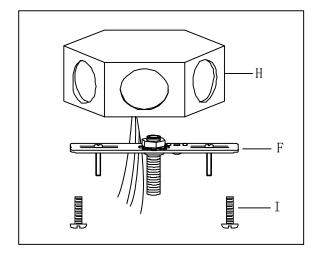



NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

STEP 4:

wrap the Ground Wire from the Fixture around the Ground Screw on the Mounting Bar (H) and then connect the Ribbed Silver Wire from the Fixture to the White Wire (neutral wire) from the Outlet Box. Connect the Smooth Silver Wire from the Fixture to the Black Wire (live wire) from the Outlet Box. Cover the connections using the Wire Connectors (O).

 NOTE: Black Wire inside Outlet Box may be red or smooth. White Wire inside Outlet Box may be ribbed.



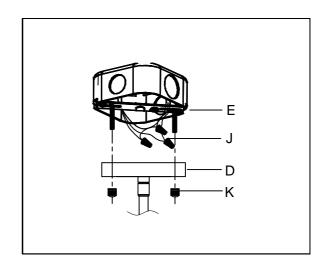

STEP 5:

Pass the Canopy(D)through the Screws(E). Tighten until sung using the ring(K).

STEP 6:

Screw in the Bulbs. This fixture has been rated for up to 5 watt MAX Type B LED bulbs (NOT included).

STEP 7:

Connect breaker and turn on Light.

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.

