

ZEDV

L I G H T I N G


ASSEMBLY AND INSTALLATION INSTRUCTIONS

ITEM NO.: CD10348/LED/AGB

ITEM NO.: CD10349/LED/CH

ITEM NO.: CD10350/LED/AGB


ITEM NO.: CD10351/LED/CH

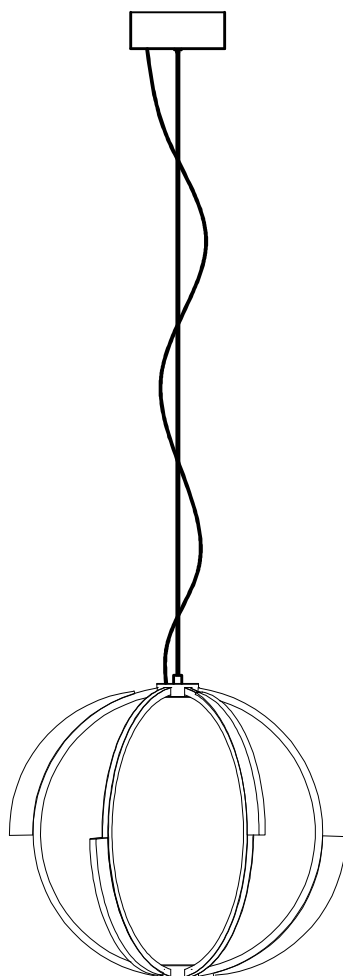

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.


STEP1:

Loosen the screw and take out the bracket.

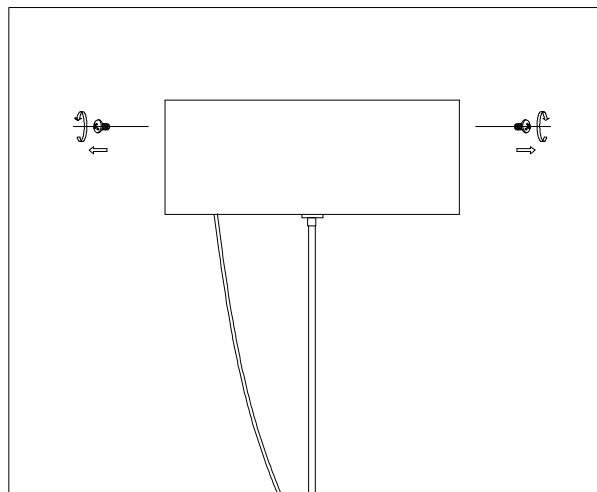



STEP 2:

Enter a hole on the ceiling, Insert the anchor, use the English screw to fix the bracket, and use the self-tapping screws to firm it.

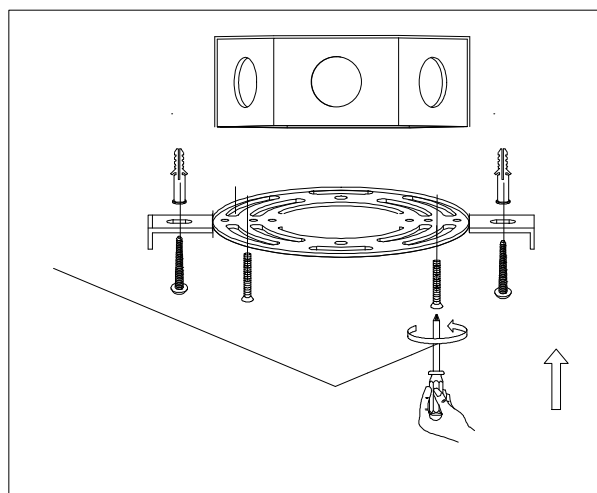

STEP 3:


Use the wiring cap to connect the power cord.

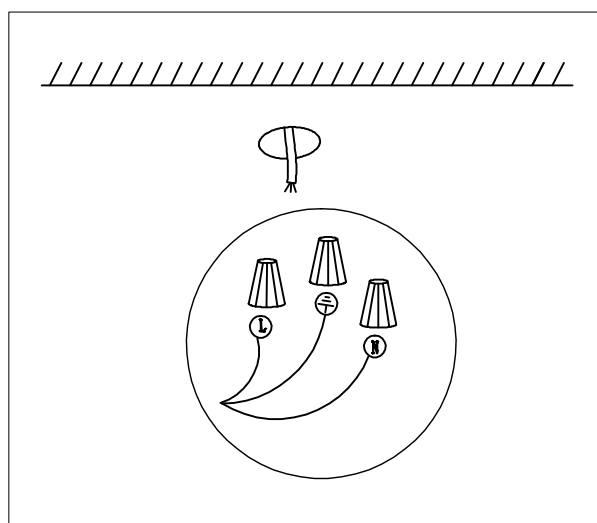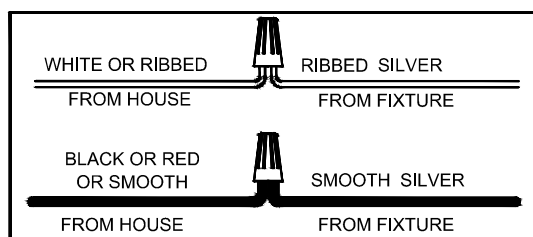


NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

STEP 4:

Use the screw to fix the canopy on the bracket, and adjust the fixture to be level .

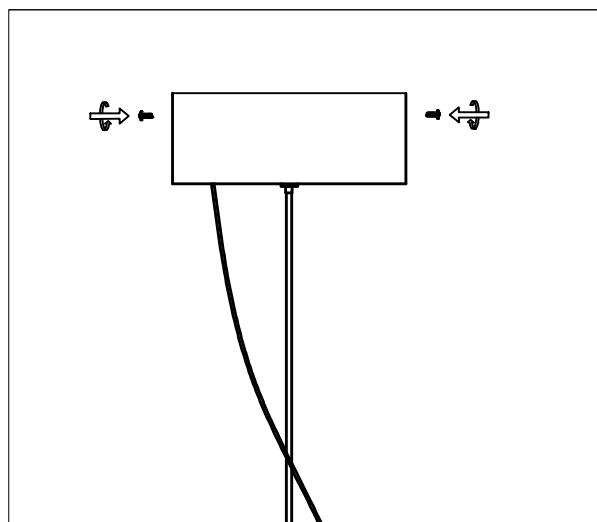

Connect breaker and turn on Light.

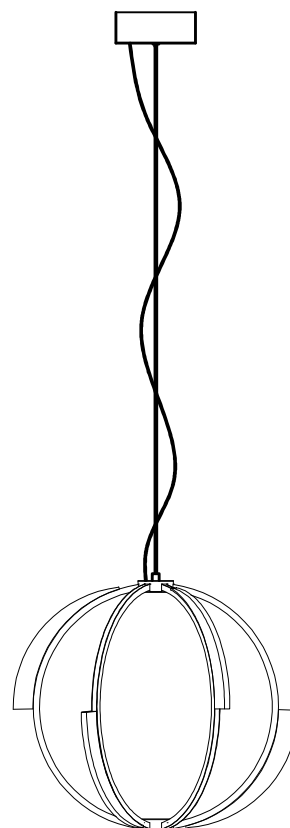

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.