





ASSEMBLY AND INSTALLATION INSTRUCTIONS


ITEM NO.: P30029/LED/CH-D

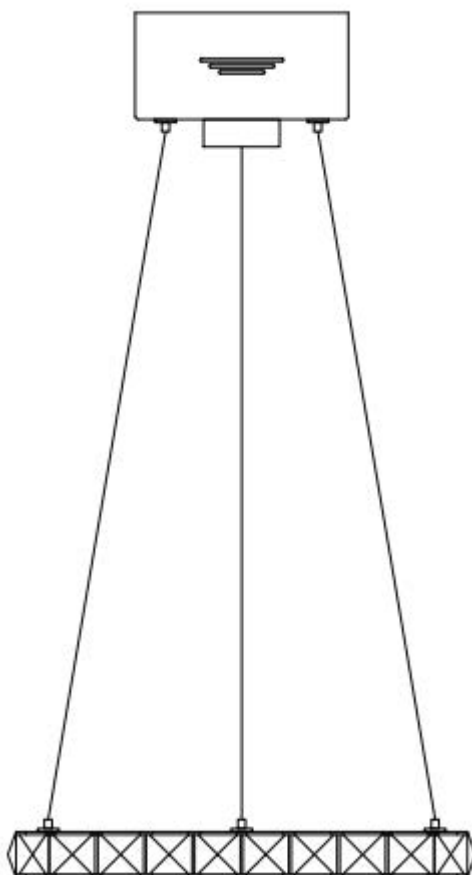


Note: Before Starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box .

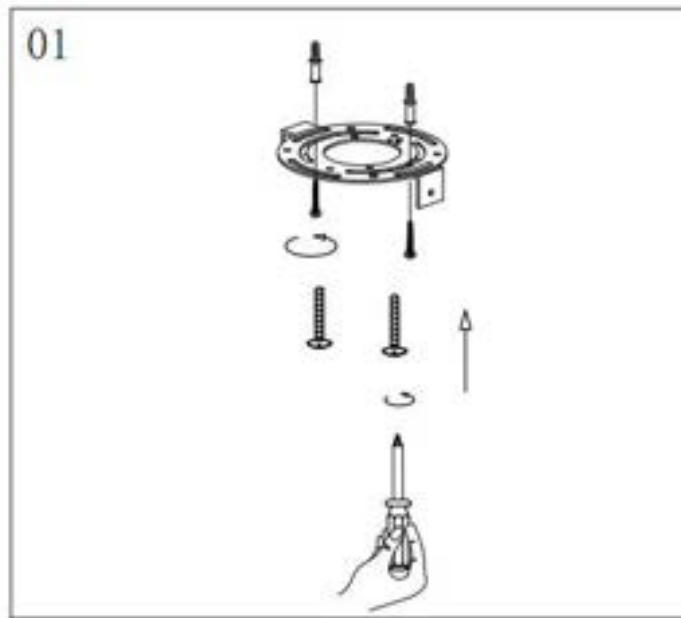

Step 1: Enter a hole on the ceiling , Insert the anchor, use the English screw to fix the bracket , and use the self-tapping screws to firm it .

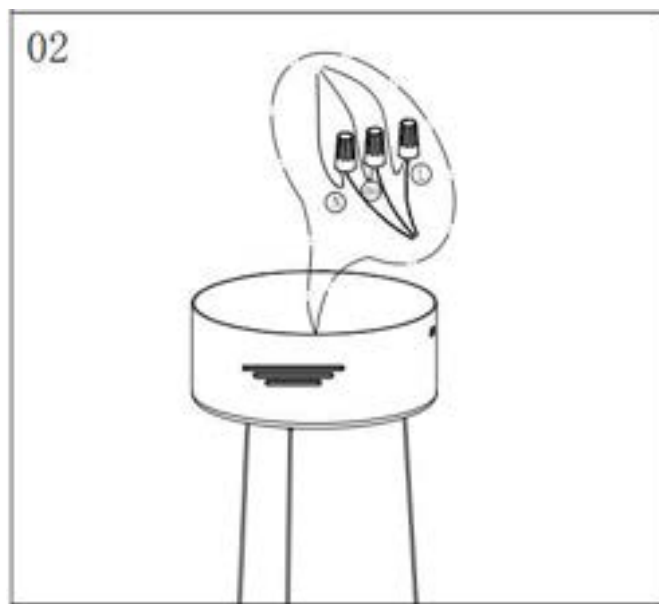


Step 2: Use the red wiring cap to connect the power cord .

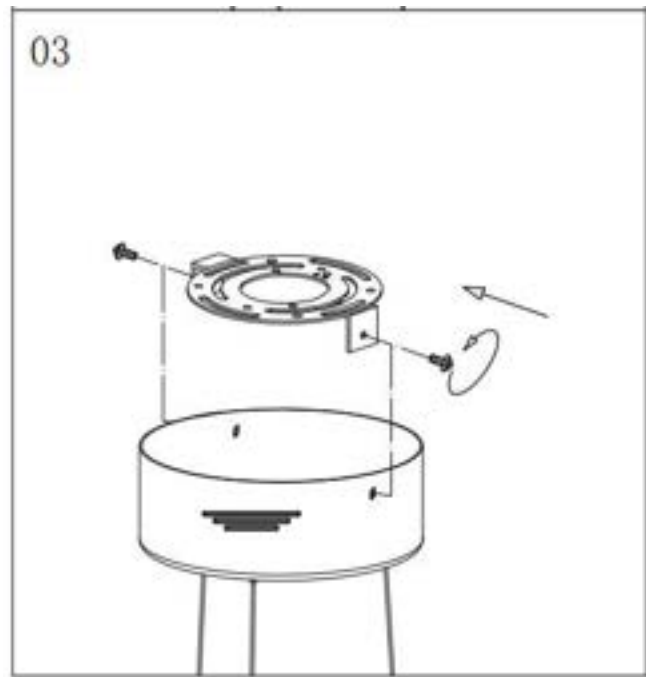

Step 3: Use the screw to fix the canopy on the bracket, and adjust the fixture to be level .

04

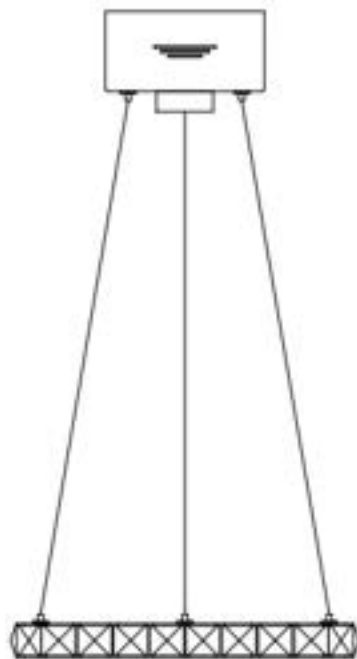

Step 4: Complete , OK .