


ASSEMBLY AND INSTALLATION INSTRUCTIONS

ITEM NO.: WS70036/2/AGB

WS70037/2/PN

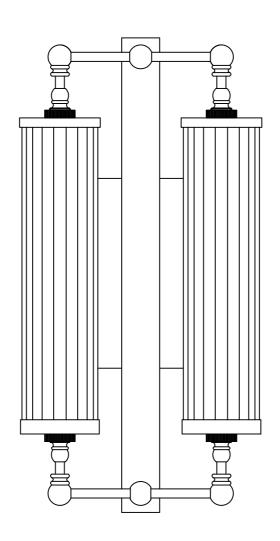


NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

STEP 1:

Screw the bulb. This Fixture has been rated for up to 40 Watt Max Type B Candelabra Bulbs (NOT Included).

Then make the Checking Ring(D) and Dome(E)fall into the bottom,put the glass tube(B), tighten the glass tube(B)use the Checking Ring(D)and Dome(E).

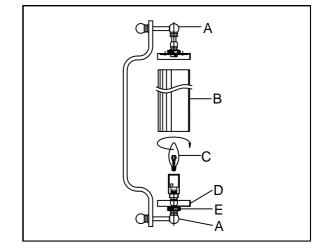

G

STEP2:

 
Fix the mounting plate (G) on the junction box (H) by screws (F) 2PCS

STEP 3:

Wrap the Ground Wire from the Fixture around the Ground Screw on the Mounting Bar and then connect the Ribbed Silver Wire from the


Outlet Box. Connect the Smooth Silver Wire from the Fixture to the Black Wire (live wire) from the Outlet Box. Cover the connections using the Wire Connectors.

NOTE: Black Wire inside Outlet Box may be red or smooth. White Wire inside Outlet Box may be ribbed.



STEP 4:

Securing the Backplate (I) onto the mounting plate (G) with Set screws (M)

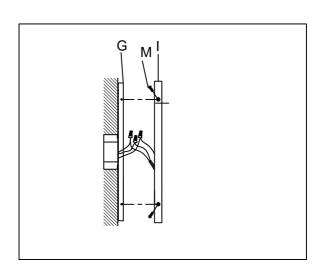

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.