


ASSEMBLY AND INSTALLATION INSTRUCTIONS

ITEM NO.: CD10359/8/AGB CD10360/8/PN

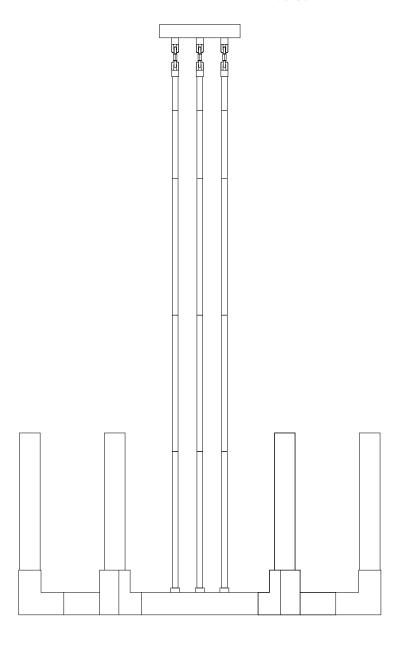

FOR YOUR SAFETY


WARNING:BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF:ETHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS SHUT OFF.

CAUTION: THE PRODUCT SHOULD BE INSTALLED BY A QULIFID ELECTRICAN THAT IS AWARE OF THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

STEP 1:


Assemble the rods(L), (K), (J), (I), (H) onto fixture body(Q) and get the desired height. Connect the quick link(G) onto loop(F) on the canopy and tighten with nut(E).

Repeat above actions and assemble all the rods.

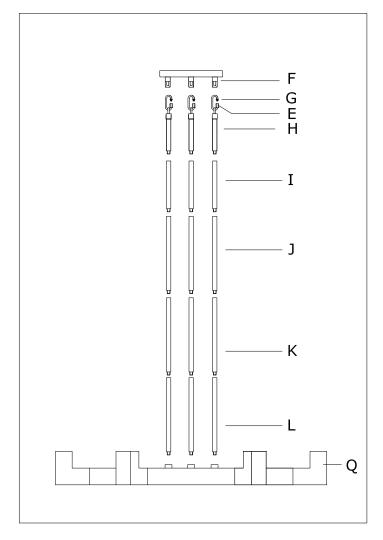

STEP 2:

Secure the explosive screws(B) into ceiling accordingly, lock the fixture mounting screws onto mounting plate and then fix mounting plate(C) onto outlet box(D not included) and ceiling with box screws(A,2pcs) and explosive screws (B,4pcs).

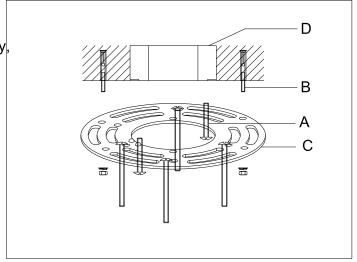


STEP 3:

Wrap the Ground Wire from the fixture around the ground screw on the mounting plate.


Connect the ribbed silver wire from the fixture to white wire(Neutral wire) from outletbox with wire connector.

Connect the smooth silver wire from the fixture to black wire(Live wire) from outlet box with wire connector.

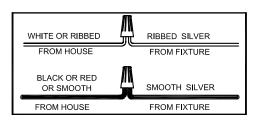


STEP 4:

Align the canopy(N) to the outlet box against mounting surface allowing the fixture mounting screws(M) to pass through fixture canopy, then secure it with 4pcs cap finials(O).

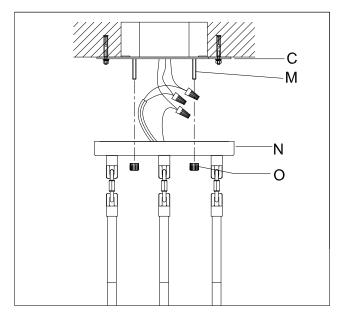

STEP 5:

Assemble 8pcs E26 bulbs(P not included,MAX 40W) onto sockets.Finally,insert the glass tube(S) into the fixture body(Q).

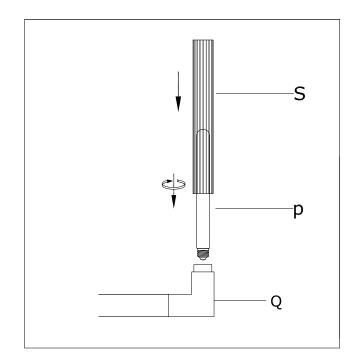


STEP 6:

Connect breaker and turn on Light.

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth. Avoid the use of harsh or abrasive chemicals as they may damage the finish.

SAFETY CABLE ASSEMBLY

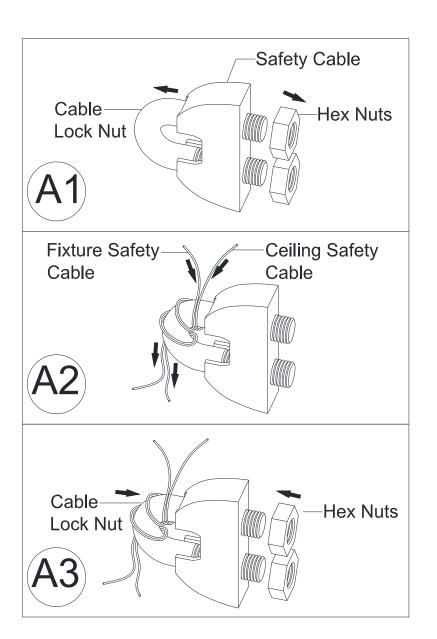

1. Remove Hex Nut from Cable Lock Nut and pull Cable Lock Nut from Safety Cable.

2. Join Fixture Safety Cable with safety cable from ceiling and wrap both safety cables around the Cable Lock Nut.

3. Secure by tightening both Hex Nuts until tight.