


ZEDV

L I G H T I N G

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ITEMNO:CD10337/12/AGB

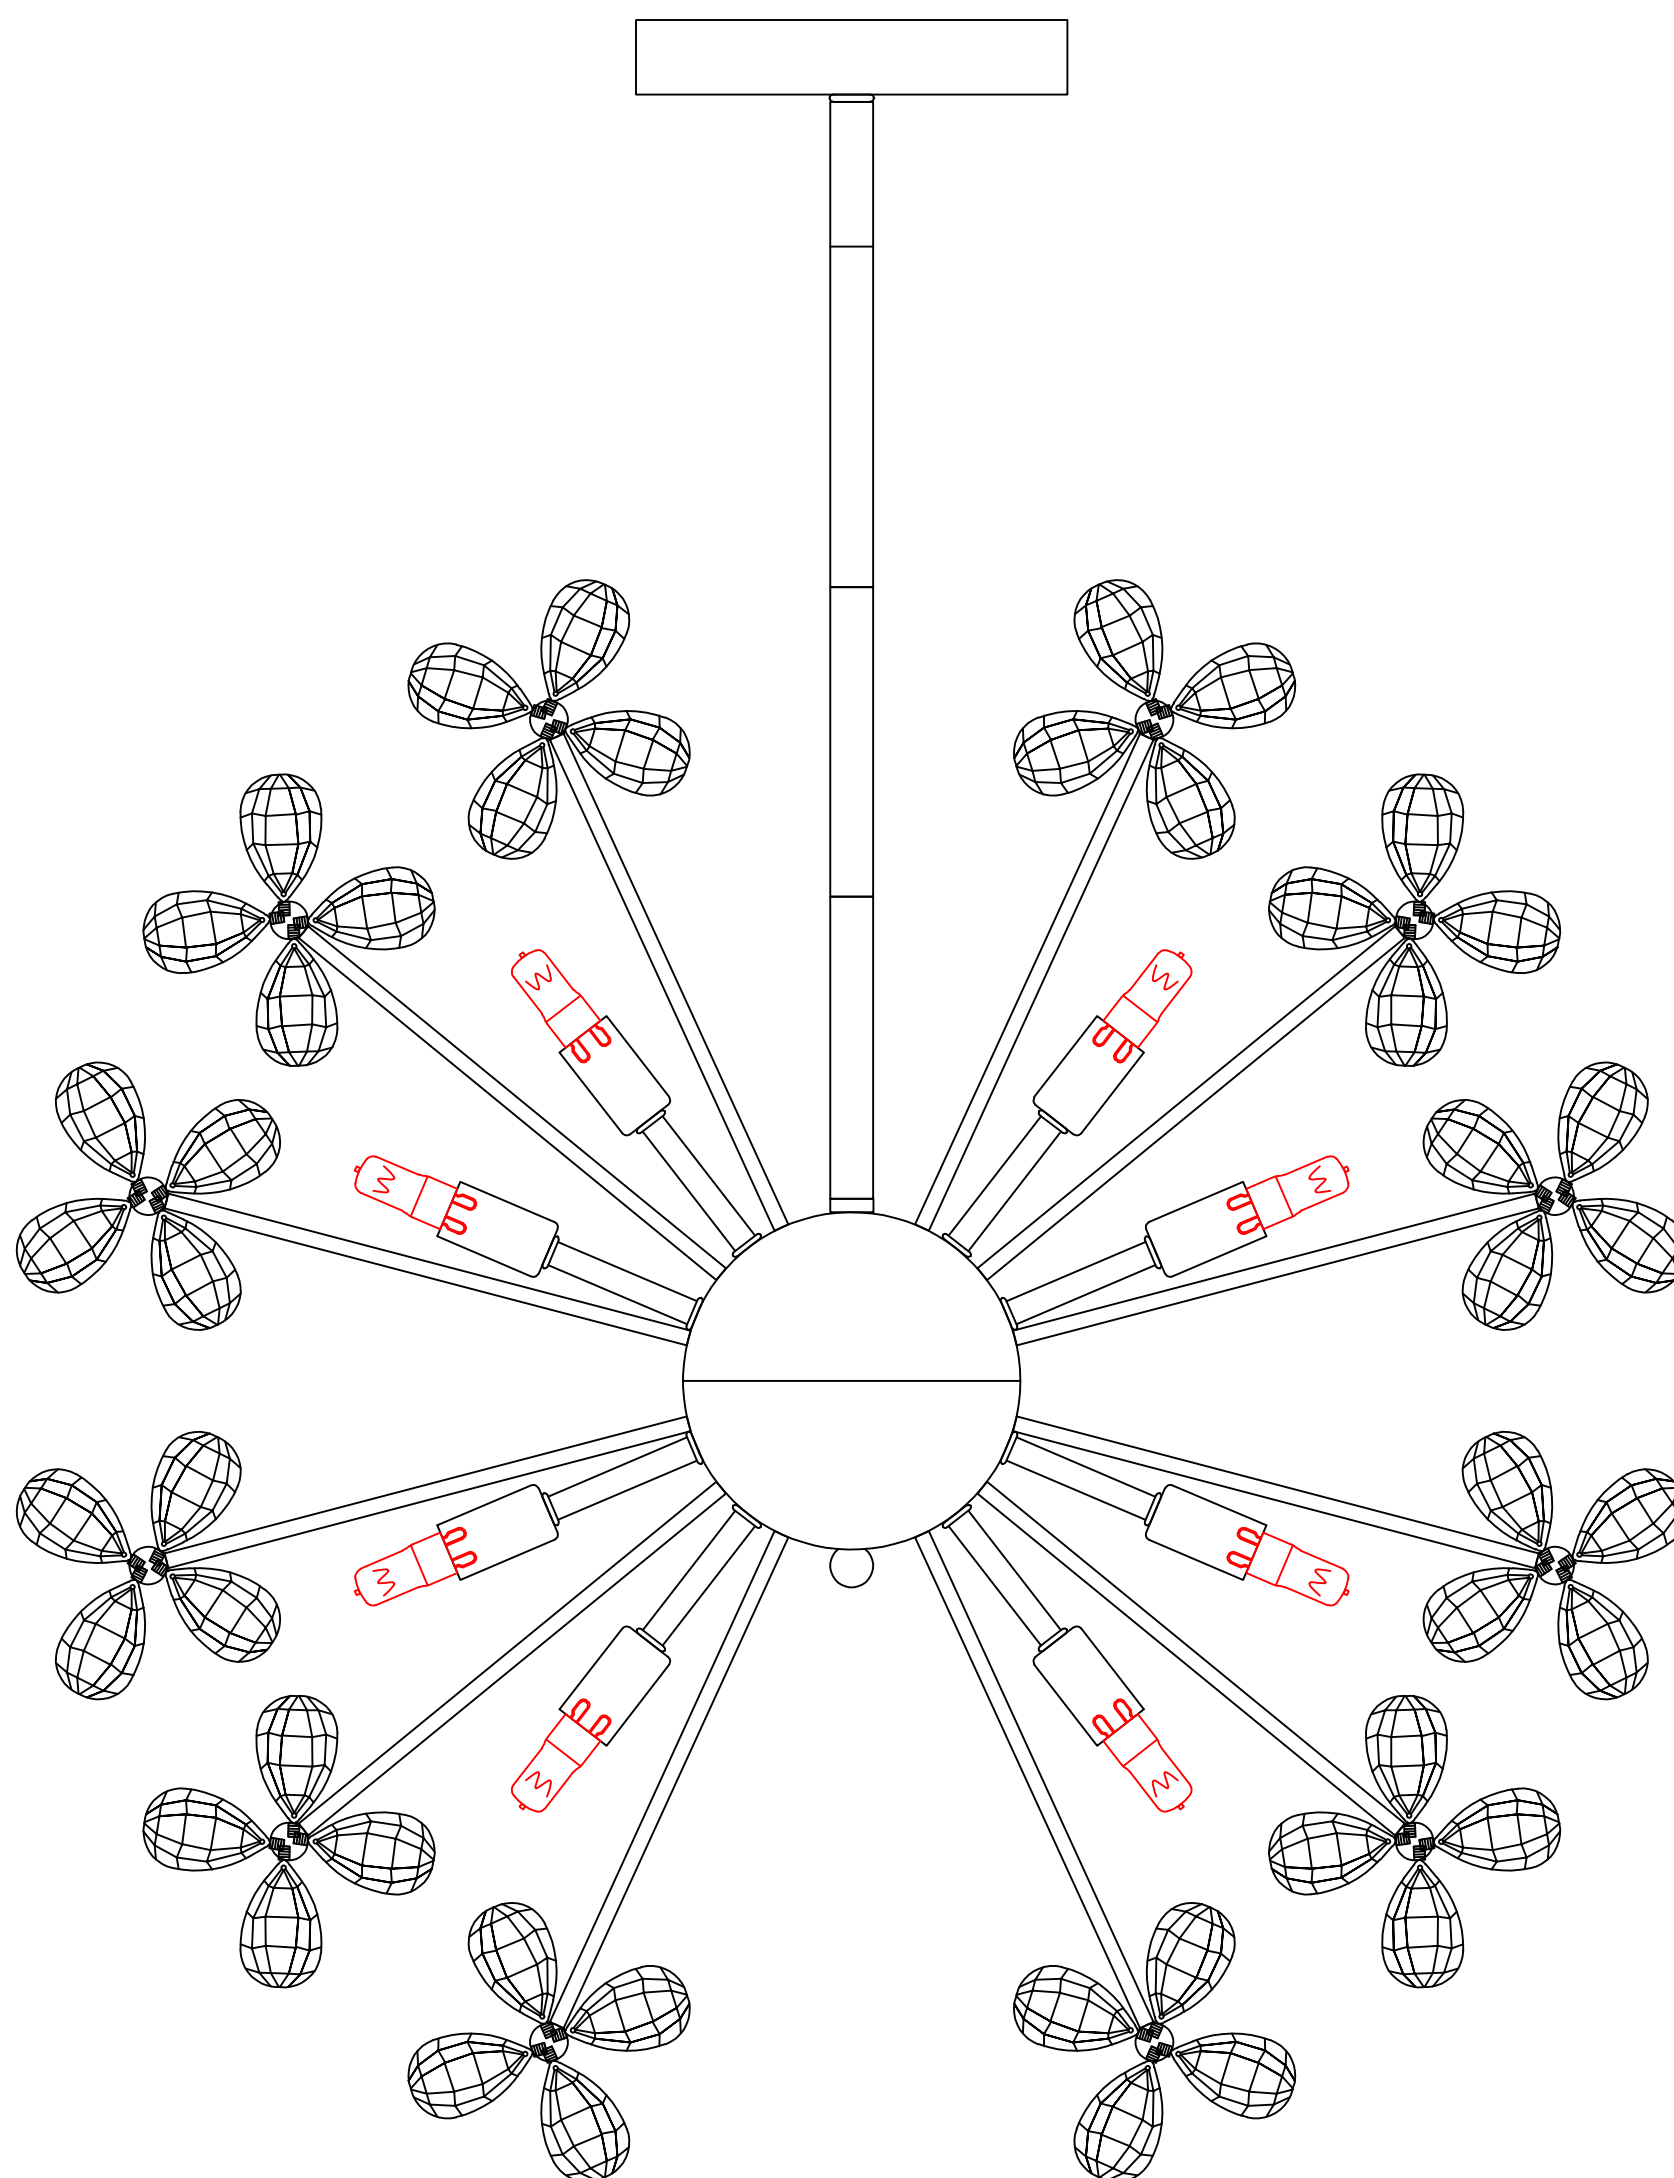

NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

INSTALLATION

IMPORTANT: Do not attach fixture directly to outlet box.

STEP 1:

Put the rod(L) into canopy(J), put the rod(L) into the centra ball(P).

STEP 2:





Secure mounting bar (H) to outlet box with outlet box screws (I). thread nipple G) into mounting bar (H).

STEP 3:

Fix the canopy(J) on the hanging broad(H), using the mounting nut(K) to fix the canopy(J).

STEP 4:

Put the crystal (X) into the rod head (Y)
put the rod (Y) into the fixture body(Z) .

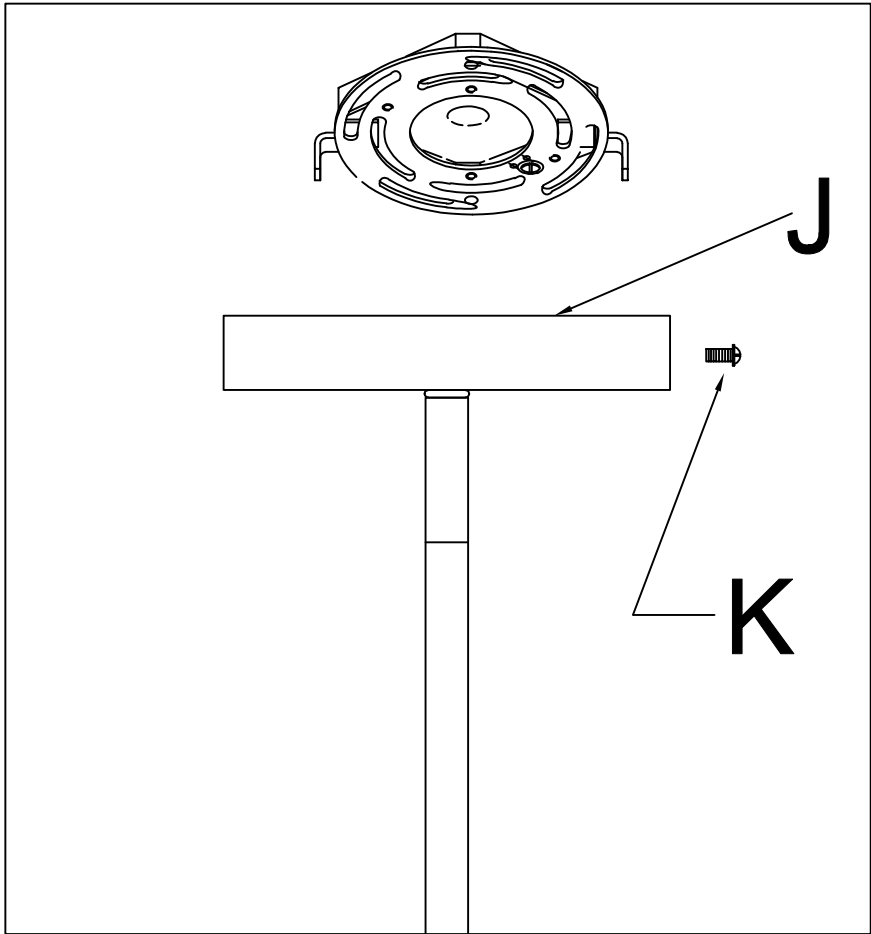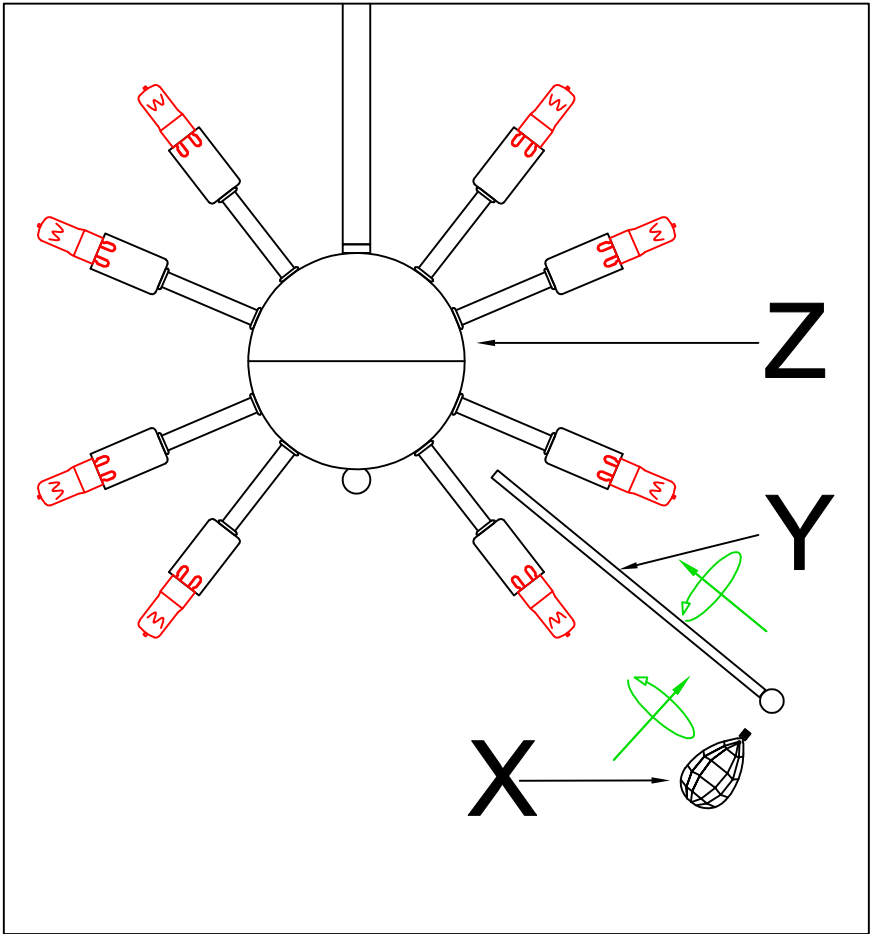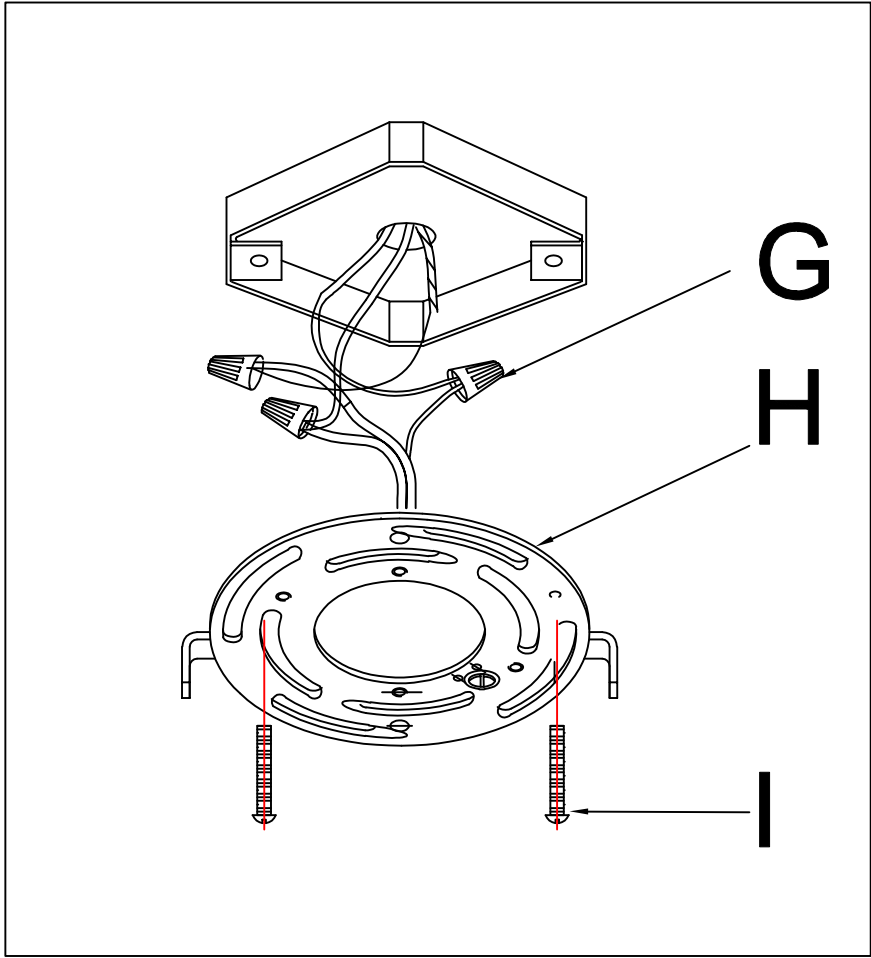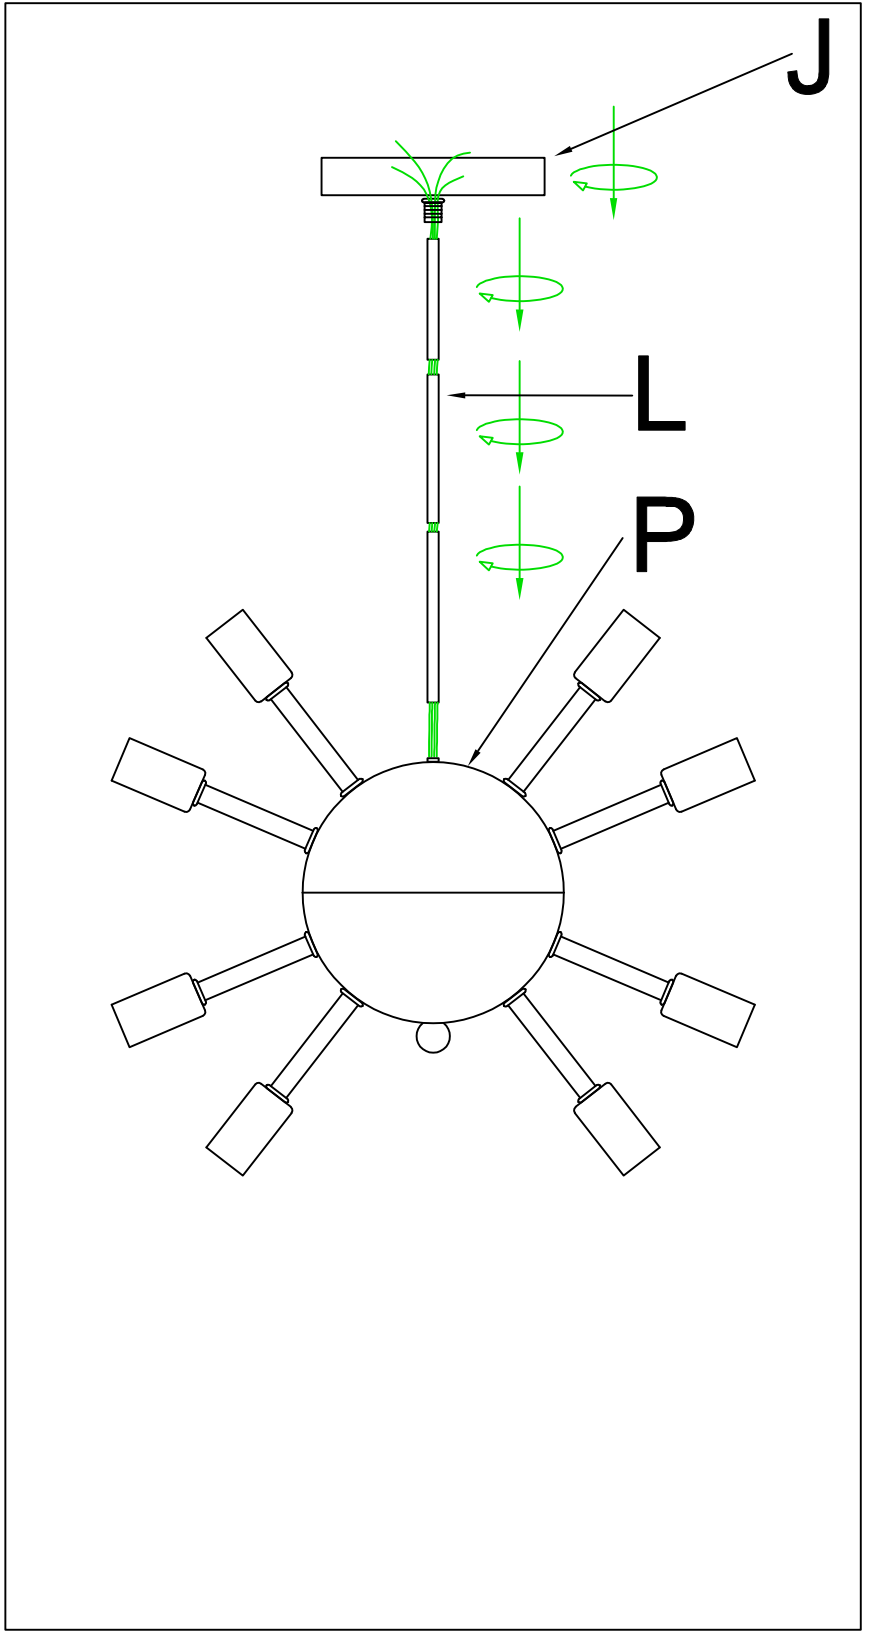


NOTE: Before starting installation of this Fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

GROUNDING INSTATIONS

STEP 1:
Insert the green grounding screw into the hole with two raised dimples on the Crossbar. Wrap the ground wire from the fixture (if supplied) around the green grounding screw, then connect it to ground wire from the outlet box (if not fixed on the outlet box) using a wire connector. If ground wire from the fixture is not supplied, wrap the ground wire (if not fixed on the outlet box) from the outlet box around the green grounding screw and tighten it.

NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES.

STEP 2:
Tack note of the color of the wire(s) on your fixture. Identify which group your fixture wire(s) falls into and connect the wires according to the direction below:

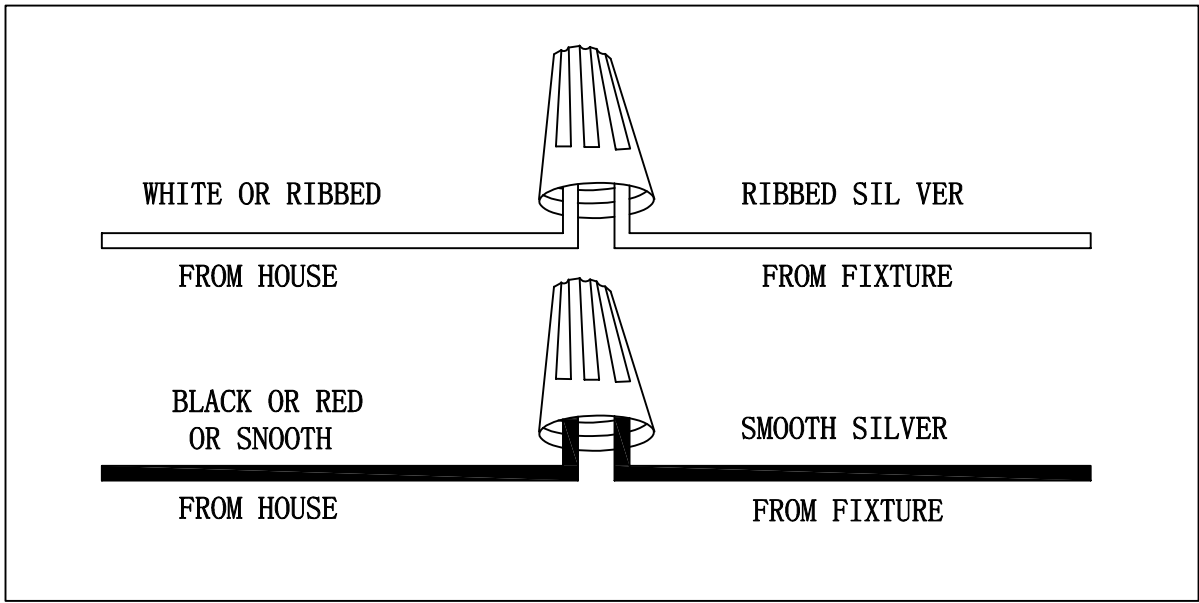

STEP 3:
Take your fixture wire(s) from group A and place evenly against the black wire from the outlet box. Do NOT twist wires together before using wire connectors.

STEP 4:
Fit a wire connector (not supplied) over the wires and screw the connector clockwise until you feel firmness.

STEP 5:
Can pull the connector off, carefully re-do steps 3 and 4, as above, and check again for a firm connection.

STEP 6:
Connect the fixture wire from group B to the white wire from the outlet box in the same manner. Make sure no bare wires can be seen outside wire connectors.

