


ZEDV

L I G H T I N G

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ITEM NO.: CD10506/12/AGB

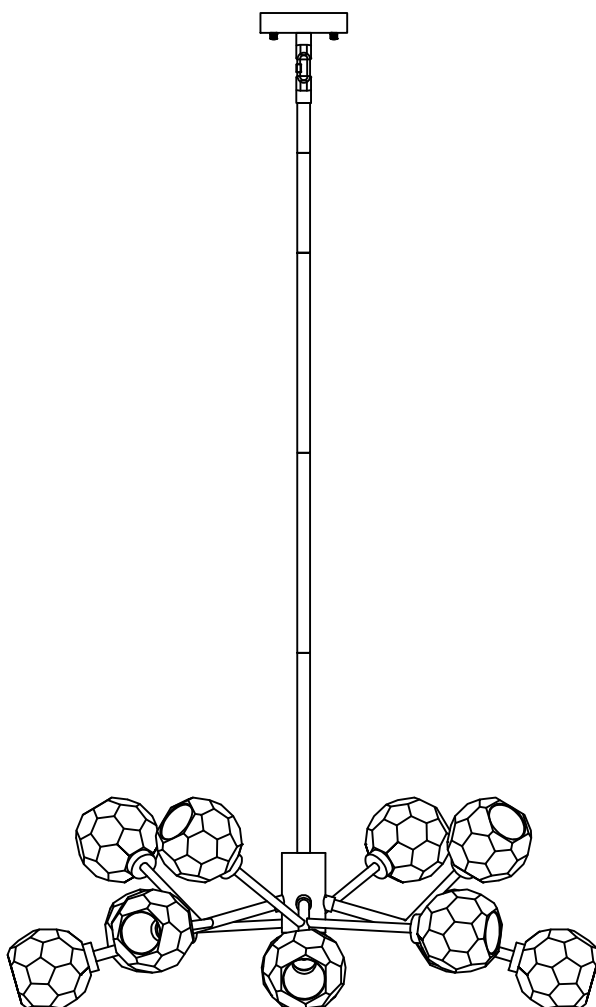


FOR YOUR SAFETY

WARNING:BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF:ETHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS SHUT OFF.

CAUTION: THE PRODUCT SHOULD BE INSTALLED BY A QULIFID ELECTRICIAN THAT IS AWARE OF THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


STEP 1:

Assemble the rods(B、C、D) onto fixture body(A),get the desired fixture height.

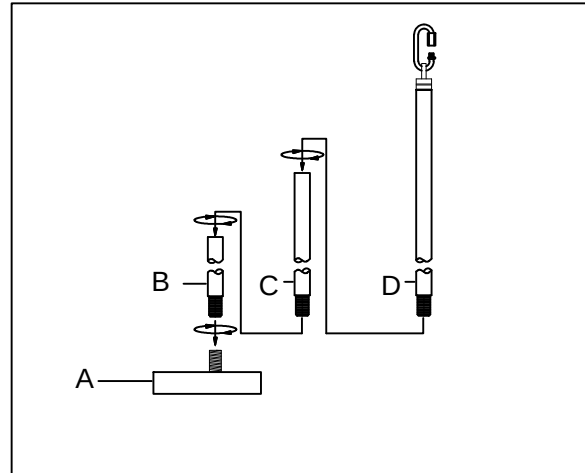


STEP 2:

Secure mounting plate(G) tight against on ceiling by 4pcs metal anchors(E) and 4pcs nuts(H), and use 2pcs box screws(I) to secure the mounting plate(G) on the junction box(F,not included).

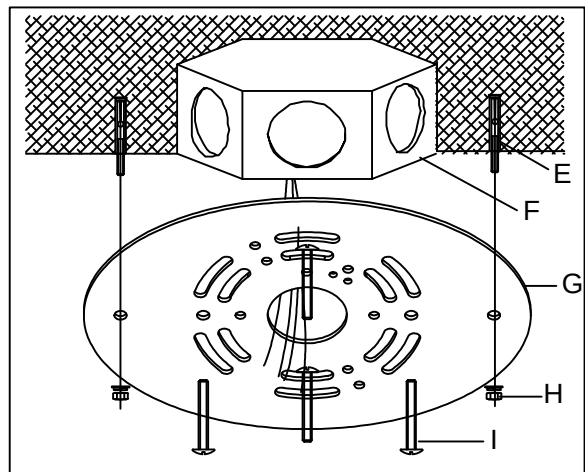

STEP 3:

Use the movable buckle (K) on top of group rods onto the loop (J) of canopy and tighten the nuts on the movable buckle (K).


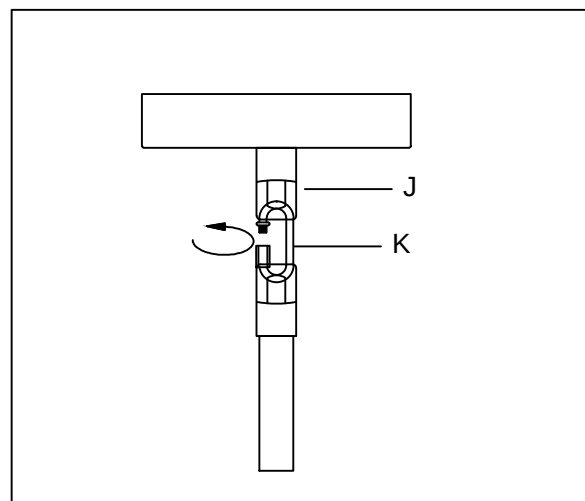


STEP 4:

Wrap the Ground wire from the fixture around the screw on the mounting plate.

Connect the ribbed silver wire from the fixture to the white wire (Neutral wire) from Junction box with wire connector(N).

Connect the smooth silver wire from the fixture to the black wire (Live wire) from junction box with wire connector(N).

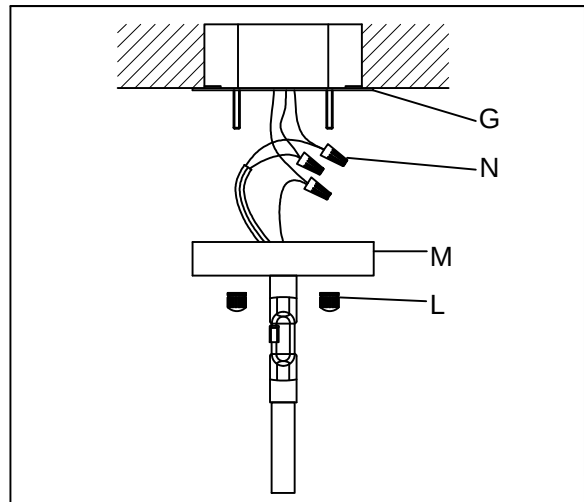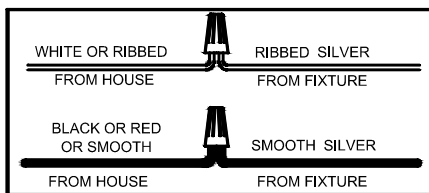


STEP 5:

Align the Canopy (M) with the mounting plate(G), the mounting screws from mounting plate pass through the Canopy holes secured tight with 2pcs cap finials (L) on the mounting screws.

STEP 6:

Assemble the crystal shade(P) onto the Metal holder(O) insert G9 bulb (Q not included) into the socket. When you load and unload the crystal, use your hand to hold the lamp body to prevent crystal falling.

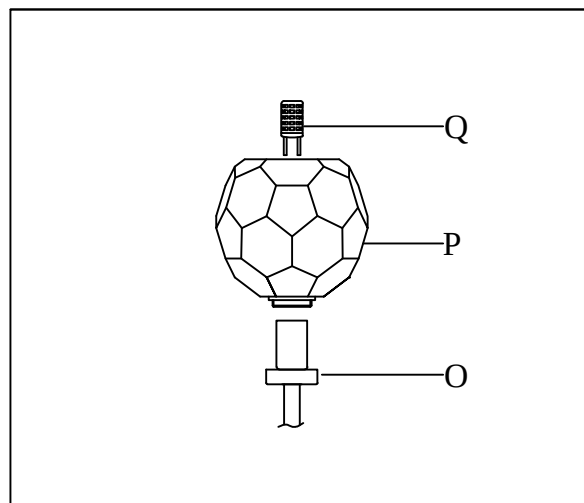


STEP 7:

Connect breaker and turn on Light.

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth.
Avoid the use of harsh or abrasive chemicals
as they may damage the finish.

SAFETY CABLE ASSEMBLY

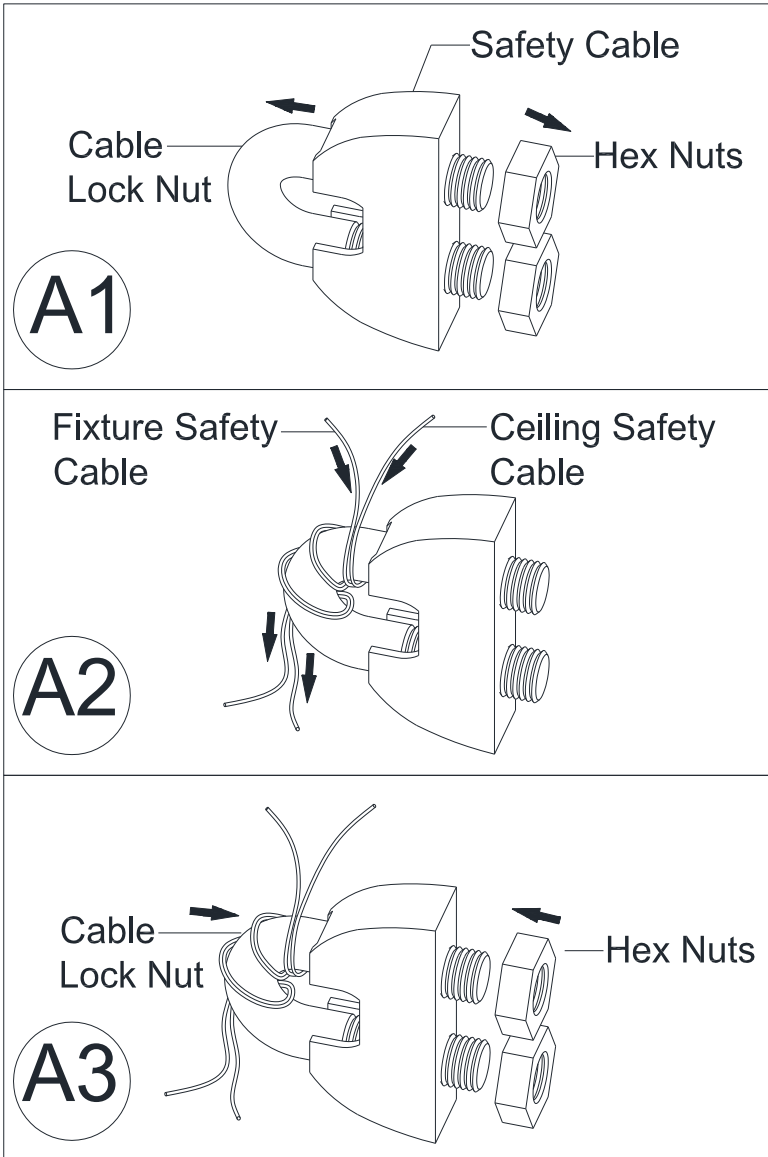

1. Remove Hex Nut from Cable Lock Nut and pull Cable Lock Nut from Safety Cable.

2. Join Fixture Safety Cable with safety cable from ceiling and wrap both safety cables around the Cable Lock Nut.

3. Secure by tightening both Hex Nuts until tight.