

MP40050/1/AGB,MP40051/1/PN,MP40052/1/SBB

Assembly and Installation Instructions

WARNINGS AND CAUTIONS FOR ALL BELOW

1. Fully read these instructions before starting installation, keep installation instructions for future references.
2. Installation is to be performed by a licensed electrician in accordance with the National Electrical Code (NEC) and local authoritative regulations.
3. To prevent electrical shock or hazards ensure electricity is powered off at circuit breaker before re-lamping or wiring of the fixture. Do not install without properly powering off designated area for fixture to be installed.

CAUTION: HEAVY FIXTURE, THE JUNCTION BOX NEEDS TO BE REINFORCED BEFORE INSTALLATION, ALL MOUNTING SCREWS MUST SCREW INTO A MINIMUM OF 1" OF WOOD BEHIND THE DRYWALL. DO NOT MOUNT THIS FIXTURE JUST TO DRYWALL. (All wood that you screw into must be secured to cross beams/ceiling joists behind the drywall). THIS PRODUCT IS DESIGNED TO BE MOUNTED ON A CORRECTLY INSTALLED STANDARD ROUND OR OCTAGON BOX.


ASSEMBLY INSTRUCTIONS - PENDANT

1. Remove fixture from its original packaging, verify all components and complete a visual inspection.
 - A. Mounting Plate (1)
 - B. Mounting Screws (2)
 - C. Wire Connectors (3)
 - D. Canopy Cover (1)
 - E. 3" Rod (1)
 - F. 6" Rod (1)
 - G. Thread Ring (1)
 - H. 12" Rod (3)
 - I. Fixture Body (1)
2. Pre-plan, make sure all Warnings and Cautions above have been completed.
3. Connect the (E) 3" rod, (F) 6" rod and (H) 12" rod in sequence, have the power cable run through the connected rod, (G) thread ring, (D) canopy cover and (A) mounting plate, then screw the connected rod onto (I) fixture body and screw the other end to swivel of (A) mounting plate.
4. Fit (A) Mounting Plate to the junction box using (B) mounting screws.
5. You are now ready to install the fixture to the ceiling.

Connect all the wires and ground using (C) wire connectors by twisting matching wires as below

 - Ground Wire (G, Green or Copper Wire) Green to Green or Copper to Green or Copper to Green or Copper to Copper from junction box.
 - Live Wire (L, Black) Black to Black Wire from junction box.
 - Neutral Wire (N, White) White to White Wire from junction box.

Once all connected, proceed to next step.
6. Fixing (D) canopy cover to (A) mounting plate with (G) thread ring.
7. You are now complete and can install light bulbs and glass/metal bars (Installation Map on Page 3)

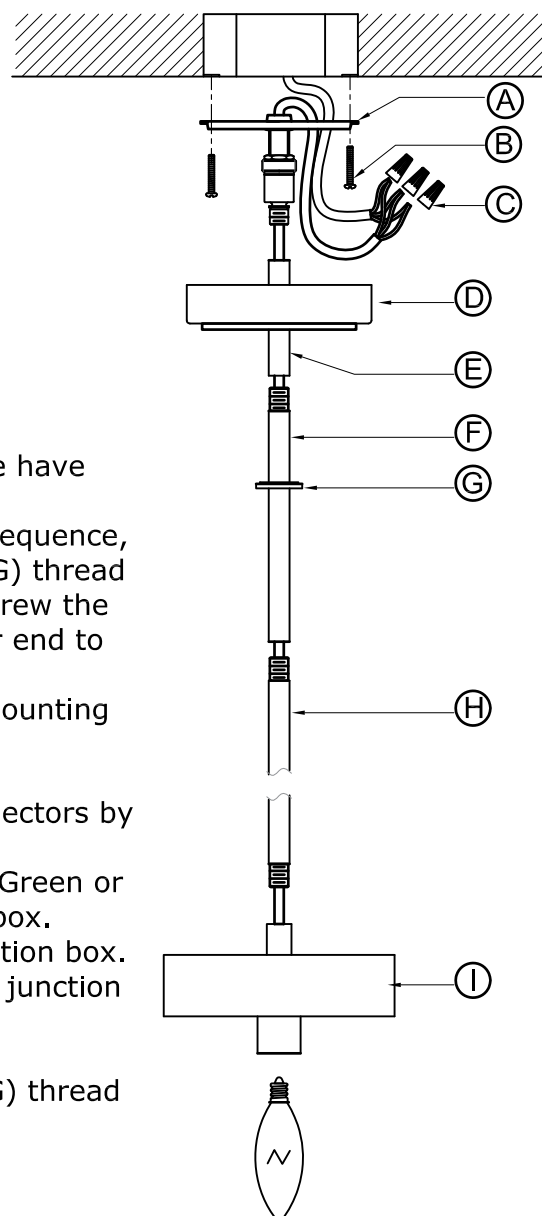

MP40050/1/AGB,MP40051/1/PN,MP40052/1/SBB

Assembly and Installation Instructions

WARNINGS AND CAUTIONS FOR ALL BELOW


1. Fully read these instructions before starting installation, keep installation instructions for future references.
2. Installation is to be performed by a licensed electrician in accordance with the National Electrical Code (NEC) and local authoritative regulations.
3. To prevent electrical shock or hazards ensure electricity is powered off at circuit breaker before re-lamping or wiring of the fixture. Do not install without properly powering off designated area for fixture to be installed.

CAUTION: HEAVY FIXTURE, THE JUNCTION BOX NEEDS TO BE REINFORCED BEFORE INSTALLATION, ALL MOUNTING SCREWS MUST SCREW INTO A MINIMUM OF 1" OF WOOD BEHIND THE DRYWALL. DO NOT MOUNT THIS FIXTURE JUST TO DRYWALL. (All wood that you screw into must be secured to cross beams/ceiling joists behind the drywall). THIS PRODUCT IS DESIGNED TO BE MOUNTED ON A CORRECTLY INSTALLED STANDARD ROUND OR OCTAGON BOX.

ASSEMBLY INSTRUCTIONS - FLUSH MOUNT

If switching to ceiling mount, the installation steps are as follows:

1. Remove fixture from its original packaging, verify all components and complete a visual inspection.
 - A. Mounting Screws (2)
 - B. Fixture Body(1)
 - C. Wire Connectors (3)
 - D. Square Box (1)
 - E. Metal Disc (1)
2. Pre-plan, make sure all Warnings and Cautions above have been completed.
3. Loosen screws and remove metal disc (E) in the middle of square box (D).
4. Loosen the screws in the square box (D) and disconnect fixture body(B).
5. You are now ready to install the fixture to the ceiling.
 - Connect all the wires and ground using (C) wire connectors by twisting matching wires as below
 - Ground Wire (G, Green or Copper Wire) Green to Green or Copper to Green or Copper to Copper from junction box.
 - Live Wire (L, Black) Black to Black Wire from junction box.
 - Neutral Wire (N, White) White to White Wire from junction box.
- Once all connected, proceed to next step.
6. Attach (D) square box to junction box and ceiling with (A) mounting screws.
7. Put (B) fixture body inside (D) square box until it passes through the screws and fix it with screws.
8. You are now complete and can install light bulbs and glass/metal bars (Installation Map on Page 3)

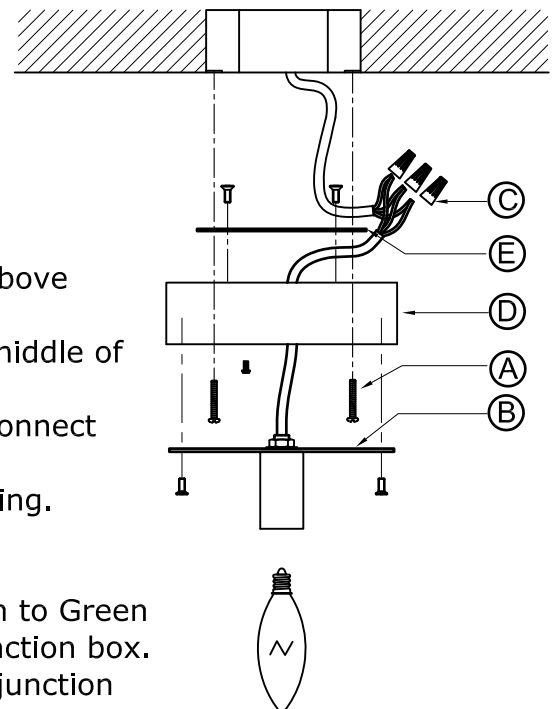

MP40050/1/AGB,MP40051/1/PN,MP40052/1/SBB

Assembly and Installation Instructions

